



Please don't use an electric screwdriver!

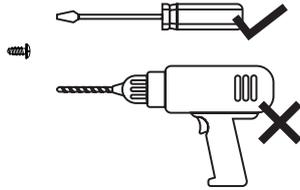


Please don't screw straight into the plaster!

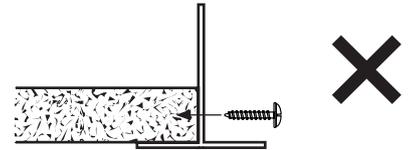

Note: It is the installer's responsibility to ensure the ceiling surface is sufficiently strong to support the weight of the luminaire and frame. Please liaise with a builder if you are unsure.

STEP 1

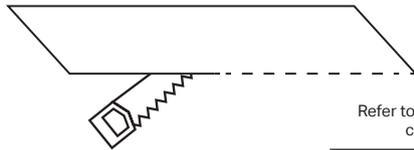


Refer to chart for correct cut-out size

Ceiling 5 to 18mm thick	Ceiling 18 to 36mm thick
610 x 310	615 x 315
610 x 610	615 x 615
1210 x 310	1215 x 315
1210 x 610	1215 x 615


Cut the opening in the ceiling

STEP 2

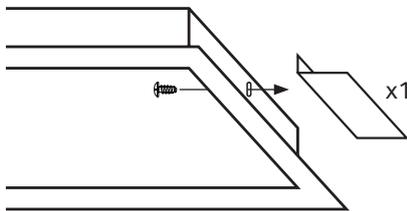


Fit a support bracket to one short side only

STEP 3

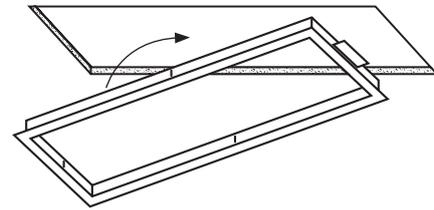


Fit the frame into the ceiling opening, bracket end first

STEP 4

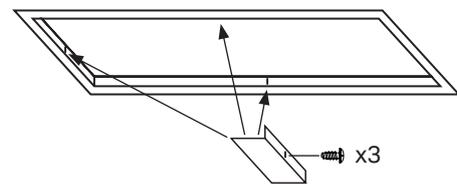


Fit the other 3 support brackets and tighten them

Ceiling 5 to 18mm thick

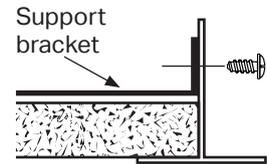


Ceiling 18 to 36mm thick

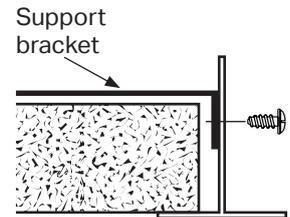


ONLY if the ceiling is over 37mm thick


First bend over the tab on side of Frame

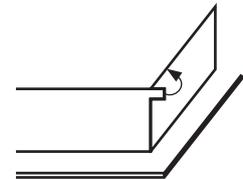

It's OK to screw into timber or metal if it's right next to the Frame

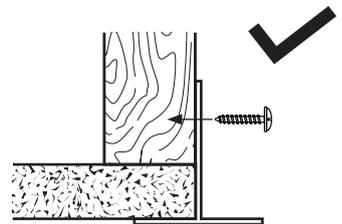

DON'T screw into timber or metal if it isn't right next to the Frame!

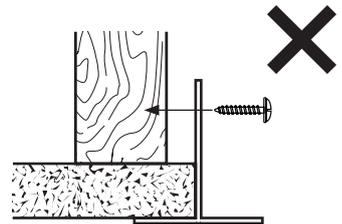

If necessary, use a piece of metal strapping to support the Frame to the building structure

