

GLG 96-112 Gow Street, Padstow, NSW 2211 T: 02 9794 9300 | www.glg.lighting

issue date: 8/04/20

INSTALLATION / WARRANTY INSTRUCTIONS

PRODUCT BRAND- PIERLITEPRODUCT NAME / CODES- POLO 2 WEATHERPROOF COLOUR SELECT OYSTER LIGHT

PLEASE READ THESE INSTALLATION INSTRUCTIONS CAREFULLY BEFORE INSTALLING OR MAINTAINING THIS EQUIPMENT. THE PRODUCT IS DESIGNED FOR INSTALLATION AND MAINTENANCE IN ACCORDANCE WITH RELEVANT AUSTRALIAN STANDARDS (AS3000) AND LOCAL REGULATIONS (WHERE APPLICABLE), BY AN AUTHORISED AND LICENCED ELECTRICIAN. THE INSTALLATION INSTRUCTIONS WERE CORRECT AT THE TIME OF PRINT. TO REFLECT CHANGES IN TECHNOLOGY AND AUSTRALIAN STANDARDS; GLGRESERVES THE RIGHT TO AMEND THE INSTRUCTIONS WITHOUT NOTICE. UPDATED GUIDELINES CAN BE FOUND ON THE RELEVANT BRAND WEB SITE. **IMPORTANT** - THE PRODUCT MUST BE MAINTAINED AND OPERATED IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS, FAILURE TO DO SO MAY DAMAGE THE PRODUCT AND SERVICES. IT IS STRONGLY RECOMMENDED THAT THIS IMPORTANT NOTE BE COMMUNICATED TO THE OWNER AND OR OPERATOR OF THE INSTALLATION AT THE TIME OF SITE COMMISSIONING. GOOD PRACTICE DOES NOT RECOMMEND THE 24/7 USE OF PRODUCTS WITHOUT THE APPLICATION OF SUITABLE SWITCH CYCLE INTERVALS. FURTHERMORE, WITH THE OMISSION OF NOMINATED SURVIVAL CURVES AND OR RECOMMENDED OPERATING HOURS, PRODUCT DESIGN EXPECTATIONS PROVIDE FOR A CONTINUAL DAILY USAGE OF 6 HOURS FOR RESIDENTIAL APPLICATIONS AND A CONTINUAL DAILY USAGE OF 12 HOURS FOR COMMERCIAL AND INDUSTRIAL APPLICATIONS. ALL PRODUCTS MUST BE THOROUGHLY CLEANED ON A REGULAR BASIS AT INTERVALS THAT REFLECT IN THE INSTALLATION ENVIRONMENT, ENSURING THE OPTICAL PERFORMANCE, TOGETHER WITH THE ELECTRICAL, MECHANICAL AND STRUCTURAL INTEGRITY AS DESIGNED, IS MAINTAINED THROUGHOUT THE SERVICE LIFE OF THE PRODUCT.



1. PRODUCT SPECIFICATION:

| Product brand | - Pierlite |
|--|------------|
| Type of Protection | - Class II |
| IP Rating - for interior products, the IP rating nominated | |
| is "from below the ceiling" unless specifically nominated. | - IP65 |
| Nominal design Voltage | - 240V |
| Luminaire Specification: | |

| Luminaire Specification. | | | |
|--------------------------|-------------------------------|------------------|---------------------|
| Product Code | Maximum Circuit Wattage (W) | Line Current (A) | In-rush Current (A) |
| POLO2-14W-EM | 14 W (Mains)/ 4W (Emergency) | 0.06A | 10A@200uS |
| POLO2-21W-EM | 21 W (Mains)/ 4W (Emergency) | 0.10A | 10A@200uS |
| POLO2-14W | 14W | 0.06A | 10A@200uS |
| POLO2-21W | 21W | 0.10A | 10A@200uS |
| POLO2-14W-S | 14W | 0.06A | 10A@200uS |
| POLO2-14W-S-EM | 14 W (Mains) / 4W (Emergency) | 0.06A | 10A@200uS |
| POLO2-21W-S | 21W | 0.10A | 10A@200uS |
| POLO2-21W-S-EM | 21 W (Mains) / 4W (Emergency) | 0.10A | 10A@200uS |
| | | | |

Important – when installing electronic or HID lighting equipment, the installer must consider the in-rush start current (if any) as documented on the control gear identification label when selecting appropriate circuit controls or protective devices.

| FOWER TACION | - 0.90 |
|--|---|
| Nominal Freq. (Hz) | - 50 Hz |
| Rated Maximum Ambient Temperature | - 40°C |
| Suitable for direct mounting on flammable surfaces | - NO |
| Dimmable (if relevant refer brand web for approved list) | - NO |
| Installation orientation | Surface/ceiling mount |
| Designed application | Industrial Interior and Exterior* |
| Rated average design life | - 36,000 hours (to L70) |
| | |

*For accessible installations, application of the security screws must be employed.

2. APPROVALS: The RCM marking of this product applies to AS/NZS CISPR15 (EMC) "Limits and methods of measurement of radio disturbance characteristics of electrical lighting and similar equipment". This product is designed to conform to AS/NZS60598 "Luminaires, general requirements and tests".

3. STORAGE: Prior to installation products are to be stored in cool and dry conditions.

4. APPLICATION: The installation application and orientation of the product is designed in accordance with the nominated product IP rating, class designation and these installation instructions. Installation environments and operating conditions beyond these instructions are not recommended.



5. INSTALLATION / GENERAL: Installation of the product is to be completed by an authorized and licensed electrician, in accordance with these instructions, relevant Australia standards and local regulations (where applicable). Termination of product wiring, together with the installation of the product must be in a manner and orientation that maintains the integrity of the designated IP rating of the product For electronic control equipment (when supplied) DO NOT MEGGER between A and N.

6. INSTALLATION / SPECIAL CONDITIONS (relevant only for products approved for such an installation):

(a) products installed in high wind environments must have suitable installation / fastening methods applied to ensure the product's mounting points are not damaged through, corrosion, constant vibration and or movement. Exterior products are designed with precise vertical aiming limits, which should not be exceeded. Any vertical floodlight aiming requirements should be specifically validated in writing with the relevant brand before consideration.

(b) products installed in corrosive or salt laden environments require special consideration and such; specific product selection, inclusive of suitable fastening methods and extensive ongoing maintenance of products installed in these environments require professional advice. It is essential that all aspects of the product selection, material specification and maintenance are specifically designed for such use and a cleaning program be adopted that maintains the design integrity of the product.
 (c) interior highbay products must be vertically suspended. The method of suspension (chain etc.) must be able to support at least 5 times the total weight of the fitting. Do not install where air movement will cause the fitting to swing about, causing wear and tear of attachment points. Luminaires should be installed where access for maintenance is practical and allows for maintenance to be completed in accordance with the manufacturer's recommendations.

(d) interior (downlight) products must be installed to ensure the lamp unit or the driver (if supplied) are not covered with any combustible materials or insulation; minimum spacings nominated for these materials are mandatory. Unless otherwise specified, minimum clearances are in accordance with AS3000 requirements. The product is not designed for installation environments which restrict conventional airflow movements eg: enclosed boxes or concrete profiles. For dimming purposes please see the relevant product brand web site for the dimming compatibility chart. When mounting multiple fixtures to conductive structures, it is recommended that the structure is earthed. The mounting facilities provided for the transformer/driver (if any), need only be utilized if in the application of the product is required by AS3000. IP ratings stated (if any) are from below the ceiling unless stated otherwise and the installation of the product must be in a manner that maintains the integrity of the relevant IP rating.

7. MAINTENANCE:

(a) The supply must be isolated before opening or accessing the luminaire. Product maintenance is IMPORTANT and is critical to the products designed performance. The product is to be maintained in accordance with the manufacturer's instructions. For the latest product maintenance guides please go to relevant brand web site. GLG is not responsible for any product not maintained in accordance with the recommended procedure or intervals. (b) lamps (where provided): The product is designed with the supplied (LEDs) / LAMP/s and it is strongly recommended that any LAMP / (LEDs) changes (if any) be made in accordance with the type, colour and brand supplied. For recommended LAMP / LED maintenance or operating guides (inclusive of recommended product switch cycles and mandatory run-in procedures for HID and Fluorescent lamps when used with dimming circuits), GLG recommends the application of the lamp manufacturer's operating guidelines, which can be found on manufacturer's website. GLG is not responsible for the product performance of alternative lamp/s used. As a member of FluroCycle, we encourage recycling of lamps and components. (c) battery (where provided): The battery is designed with a rated average battery design life of 25,000 hours in standby mode. The battery is supported with a standard 3 year warranty; conditional of the product being maintained and operated in accordance with the manufacturer's guidelines and tested in accordance with AS/NZS2293. For guidelines see product installation instructions or visit the relevant brand web site. (d) for products supplied with glass visors or covers, do not operate the product with a damaged visor or cover; it is recommended the product be turned off, area surrounding the product vacated and the damaged glass replaced by a professional installer immediately.

8. WARRANTY INSTRUCTIONS: For the purpose of warranty claims (if any) the following instructions apply: **Warranty components** – THE PRODUCT, (identified as the THE PRODUCT only). **Warranty period** - The above components

are provided with a warranty of THREE (3) year/s or 12,500 hours of operation (which ever arrives first) against manufacturing defects or failure to perform to specifications for products installed by an authorised installer in accordance with the manufacturer's installation instructions and which have not been subject to incorrect operation or maintenance, unauthorised modification or damage arising from any intervening cause. **Warranty reference** - The warranty reference date commences from the date of purchase. **Warranty point of contact** – GLG Pty Ltd, 96 Gow Street Padstow NSW 2211, phone T 02 9794 9300 contact – GLG After Sales Support.

Warranty claim procedure – For the purpose of making a claim the customer must:

1. Contact the "point of contact" above and upon provision of proof of purchase the customer will receive a goods return advice (GRA) number. 2. At the customer's expense, collect and return the goods to the "point of contact" with the issued GRA number. 3. Upon receipt of the goods, GLG will review the claim and if found to be accepted, GLG will return a replacement product to the customer to install at the customer's expense. Alternatively if the claim is rejected, the customer may request the return of the goods at their expense. Consumer Contracts - The benefits to the customer given by the GLG warranty are in addition to other rights and remedies of the customer if the goods are the subject of a Consumer Contract under the Australian Consumer Law. In that event the following statement is required to be brought to the Consumer's attention: - Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Limitation of Liability - if the goods are not purchased by the customer under a Consumer Contract within the Australian Consumer Law then but not otherwise; - (a) the Company is not liable in tort for any loss or damage suffered by the customer or by any third party; and (b) in no circumstances is GLG liable to the customer or to any third party for any loss of profits, loss of anticipated savings, economic loss or interruption of business or for any indirect or consequential loss (Consequential Loss). Terms of Sale - these Warranty provisions are in substitution for any inconsistent provisions in the GLG Terms and Conditions of Sale in so far as they apply to the Warranty components.



INSTALLATION INSTRUCTION FOR POLO 2 WEATHERPROOF COLOUR SELECT OYSTER LIGHT

Product codes: POLO2-14W-EM, POLO2-21W-EM, POLO2-14W, POLO2-21W, POLO2-14W-S, POLO2-14W-S-EM, POLO2-21W-S, POLO2-21W-S-EM

Product Codes:

Emergency:

- POLO2-14W-EM
 - POLO2-21W-EM

Standard

- POLO2-14W
- POLO2-21W

Sensor & Sensor + Emergency

- POLO2-14W-S
- POLO2-14W-S-EM
- POLO2-21W-S
- POLO2-21W-S-EM

Service & Operation for Emergency codes: Product Codes: POLO2-14W-EM & POLO2-21W-EM

Normal Operation: Maintained Emergency Operation.

Battery: Sealed Lithium Iron Phosphate (LiFePO4) rechargeable battery pack. As per AS/NZS 2293, it is required that the battery pack is discharged and recharged at least once every 6 months.

In case of a replacement, same brand and type of battery pack must be used. Allow 24 hours charging time before carrying out any discharge tests.

Charge Duration: 16 Hours Discharge Duration: 2 Hours (Initial Test)

Test Switch: If manual test switch pressed, the fixture will operate from its battery supply. Please ensure battery plug is connected to the inverter battery terminal.

Installation

Step 1: Switch off power supply before installation




Step 2: Unlock clips and open the diffuser









Step 3: Loosen the screws and lift the gear tray.

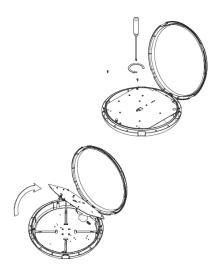

Step 4: Put cable through the entrance hole and connect it to the terminal block. Adjust the CCT as per the requirement 3000k/4000k/5700k

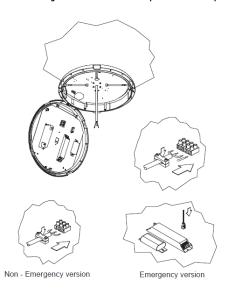


Step 5: Position and fix the base onto the ceiling

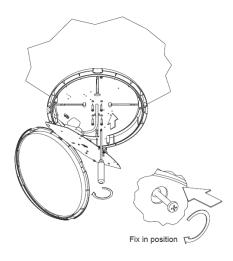




Step 6: Tighten the screws and fix the gear tray

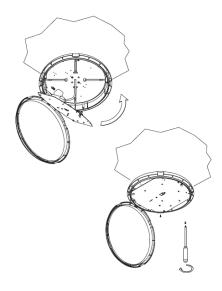

Step 7: Close the diffuser and lock the clips.

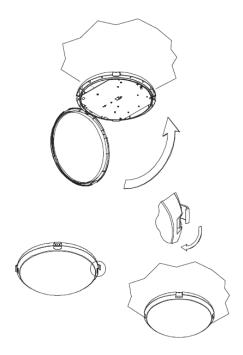

Step 8: Switch on power supply and complete the installation.



On/off Control HF Sensor

HC005S Super-compact Version

Applications

Occupancy detector with on/off control suitable for indoor use.

Suitable for building into the fixture:

- Office / Commercial Lighting
- Meeting rooms
- Classroom

Use for new luminaire designs and installations

Features

Zero crossing detection circuit reduces in-rush current and prolongs relay life

E Loop-in and loop-out terminal for efficient installation

Technical Data

Input Characteristics


| Model No. | HC005S |
|----------------|--------------------|
| Mains voltage | 220~240VAC 50/60Hz |
| Stand-by power | <0.5W |
| Load ratings: | |
| Capacitive | 400VA |
| Resistive | 800W |
| Warming-up | 20s |
| | |

Sensor Data

| Model No. | HC005S |
|----------------------|-----------------------------|
| Sensor principle | High Frequency (microwave) |
| Operation frequency | 5.8GHz +/-75MHz |
| Transmission power | <0.2mW |
| Detection range | Max. (Øx H) 12m x 6m |
| Detection angle | 30° ~ 150° |
| Setting adjustments: | |
| Sensitivity | 10% / 30% / 50% / 75%/ 100% |
| Hold-time | 5s ~ 30min (selectable) |
| Daylight threshold | 2 ~ 50 lux, disabled |

Environment

| Operation temperature | Ta: -35°C ~ +70°C |
|-------------------------|-------------------|
| Case temperature (Max.) | Tc: +80°C |
| IP rating | IP20 |

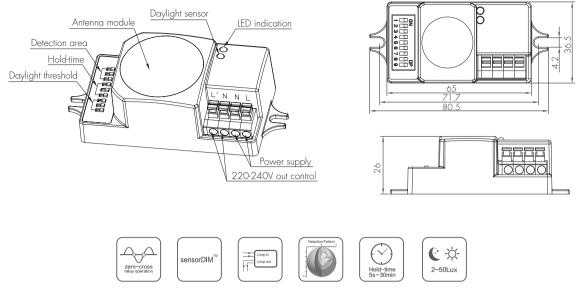

Note: We recommend the mounting distance between sensor to sensor should be more than 2m to prevent sensors from false-triggering.

Functions and Features

1 On/off Control

This sensor is a motion switch, which turns on the light upon detection of motion, and turns off after a pre-selected hold-time when there is no movement. A daylight sensor is also built in to prevent the light from switching on when there is sufficient natural light.




With sufficient natural light, the light does not switch on when presence is detected.



With insufficient natural light, the sensor switches on the light automatically when presence is detected.




The sensor switches off the light automatically after the hold-time when there is no motion detected.

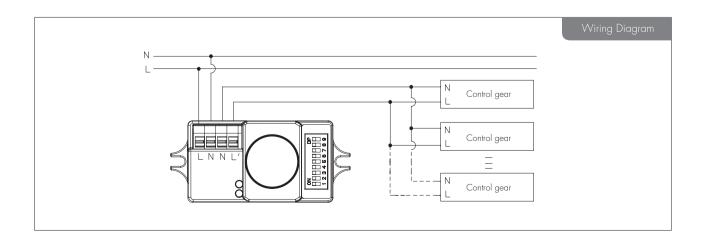

Subject to change without notice.

2 Zero-cross Relay Operation

Designed in the software, sensor switches on/off the load right at the zero-cross point, to ensure that the in-rush current is minimised, enabling the maximum lifetime of the relay.

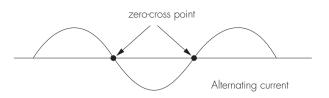


3 Loop-in and Loop-out Terminal


Double L N terminal makes it easy for wire loop-in and loop-out, and saves the cost of terminal block and assembly time.

4 SensorDIM[™] Function

Working with Switch-dim. control gear (Excel ballast/driver, corridor function), this sensor can also achieve tri-level control.

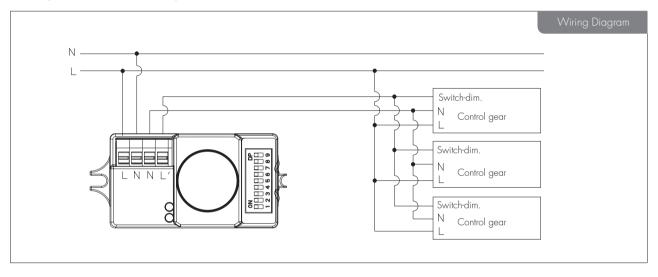

Detection Pattern

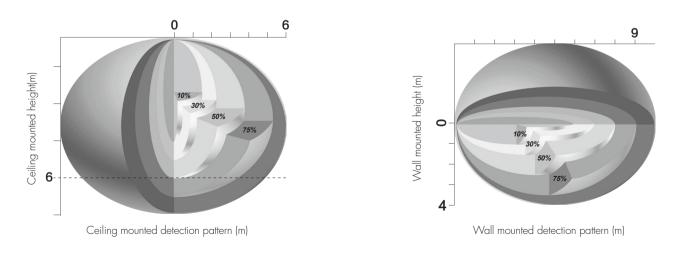

DIP Switch Settings



Sensor sensitivity can be adjusted by selecting the combination on the DIP switches to fit precisely for each specific application.

| | 1 | 2 | 3 | | |
|------------------|---|---|---|------|---|
| Ι | | | | 100% | |
| | 0 | | | 75% | |
| $\parallel \mid$ | 0 | | 0 | 50% | |
| IV | 0 | 0 | | 30% | ð |
| V | 0 | 0 | 0 | 10% | |

| I - 100% |
|-----------|
| ∥−75% |
| III – 50% |
| IV - 30% |
| V - 10% |

2 Hold Time

Select the DIP switch configuration for the light on-time after presence detection. This function is disabled when natural light is sufficient.

| | 4 | 5 | 6 | | |
|-----|---|---|---|-------|---|
| Ι | | | | 5s | |
| | ٠ | 0 | ٠ | 30s | • |
| | | 0 | 0 | 1 min | |
| IV | 0 | ٠ | • | 5min | |
| V | 0 | | 0 | 10min | ð |
| VI | 0 | 0 | ٠ | 20min | |
| VII | 0 | 0 | 0 | 30min | |

| I – 5s |
|-------------|
| II – 30s |
| III – 1 min |
| IV – 5min |
| V – 10min |
| VI – 20min |
| VII – 30min |

3 Daylight Threshold

Set the level according to the fixture and environment. The light will not turn on if ambient lux level exceeds the daylight threshold preset. Please note that the ambient lux level refers to internal light reaching the sensor.

Disabling the daylight sensor will put the sensor into occupancy detection only mode.

| | 7 | 8 | 9 | | |
|-----|---|---|---|---------|---|
| Ι | | | | Disable | • |
| II | 0 | | | 50Lux | ά |
| III | 0 | | 0 | 20Lux | Ļ |
| IV | 0 | 0 | | 5Lux | 0 |
| V | 0 | 0 | 0 | 2ux | |

I – Disable II - 50 Lux III – 20 Lux IV – 5 Lux V – 2 Lux